

Info service: Replace wipers in seconds with Quick-Clip




An adapter connects the blade assembly to the windshield wiper arm.

To remove the old blade assembly:

1. Pull the end of windshield wiper arm outward to fold the arm away from the windshield.
2. Press the tab on the adapter to release the detent mechanism.
3. On all standard windshield wiper arms: Maintain pressure on the tab while pulling the blade assembly downward to slide it out of the recess on the wiper arm.

Installation of the new wiper blade:

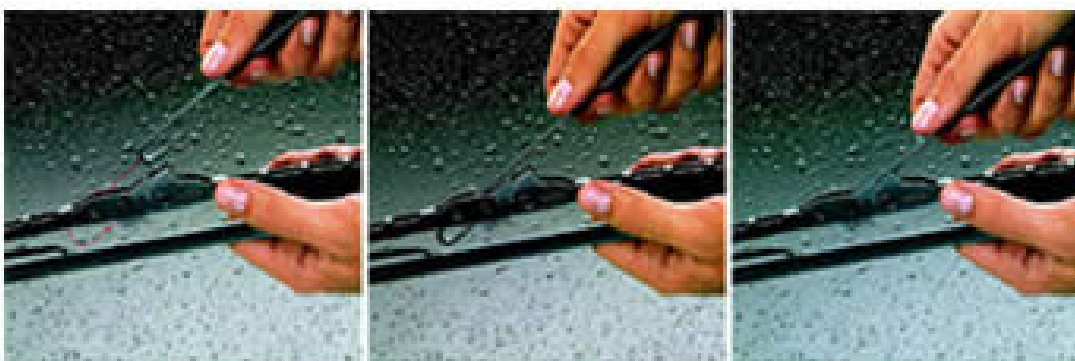

① Simply insert the blade in the wiper arm

② ...pull the blade all the way into the wiper arm

③ ...snap into place - and finished!