

# PAT GUIDE

A handy reference for your perfect PAT Testing solution.

Testers & Functions		PT300	PT350	Supernova Plus	Europa Plus	Europa PAC Plus	PT200	PT210	PT 220	PT100	PT50
▼ Functions	▶ Testers										
Mains Supply Check		■	■	■	■	■	■	■	■	■	■
PASS/FAIL Indicators		■	■	■	■	■	■	■	■	■	■
Earth Test Lead Null		■	■	4-Wire	4-Wire	4-Wire	■	■	■		
Earth Continuity (100mA)				■	■						
Earth Continuity (200mA)		■	■		■	■	■	■	■	■	■
Earth Continuity (4A)				■	■						
Earth Continuity (10A)				■	■	■					
Earth Continuity (25A)				■	■						
Insulation Resistance (250V)			■	■	■	■					
Insulation Resistance (500V)		■	■	■	■	■	■	■	■	■	■
PE conductor current (Earth leakage)		■	■	■	■	■	■	■	■		
Touch Current		■	■	■	■	■	■	■			
Alternative Substitute Leakage			■	■	■	■			■		
Flash Test				■							
230V/110V INPUT/OUTPUT				■							
IEC Lead Test		■	■	■	■	■	■	■	■	■	■
Earth Loop Test (range Indicator)						■					
Earth Loop Test (digital reading)		■	■					■	■		
RCD Test		■	■				■	■	■		
Resistance Measurement							■	■			
Voltage Measurement							■	■			
Temperature Measurement							■				
Custom LCD						■		■	■	■	■
Graphical LCD		■	■	■	■	■	■	■	■	■	■
Back Light		■		■	■	■	■	■			
Keyboard		■	■	■	■						
Barcode Scanner Input		■	■	■	■						
Test 'n' Tag		■	■	■	■						
Bluetooth (Wireless)		■	■								
Hand-Held		■	■				■	■	■	■	■
Battery Powered		■	■				■	■	■	■	■
Rechargeable Batteries		■	■				Optional		■	Optional	Optional
Weight		1.0kg	1.0kg	9.5kg	3.5kg	3.5kg	1.0kg	1.0kg	1.0kg	1.0kg	1.0kg
Auto Testing		■	■	■	■					■	■
User Tests for non electrical assets		■	■								
Pass/Fail program indicators		■	■	■	■						
PE Resistance Limit Calculator		■	■	■	■						
Memory Size		8000 records	8000 records	5000 records	5000 records	100 records					
PC Download		■	■	■	■	■					
PC Upload		■	■	■	■						
Graphical On Line Help		■	■	■	■						
Real Time Clock		■	■	■	■						

Accessories		Part Number	PT300	PT350	Supernova Plus	Europa Plus	Europa PAC Plus	PT 200	PT 210	PT220	PT100	PT50
▼ Accessories	▶ Testers											
230/110V adaptor		270A076	■	■	■	■	■	■	■	■	■	■
110/230V adaptor		281A075	■	■	■	■	■	■	■	■	■	■
Appliance Number Labels		194A307	■	■	■	■	■	■	■	■	■	■
Test Code Labels		194A308	■	■	■	■	■	■	■	■	■	■
Custom Appliance Number Labels		194A323	■	■	■	■	■					
CCD Scanner		194A922	■	■	■	■						
3 Phase Adaptors		209A910	■	■	■	■	■	■	■	■	■	■
3 Phase Adaptors		209A911	■	■	■	■	■	■	■	■	■	■
3 Phase Adaptors		209A912	■	■	■	■	■	■	■	■	■	■
3 Phase Adaptors		209A913	■	■	■	■	■	■	■	■	■	■
PAT Checkbox		227A910	■	■	■	■	■	■	■	■	■	■
Europa Series Carry Case		270A951				■	■					
Thermal Label Printer		283A954			■	■	■					
Modem Kit		283A969			■	■						
Supernova Plus Carry Case		298A950			■							
PrimeTest 200 Temperature Module		304A952						■				
Test n Tag Printer		308A910	■	■	■	■						
Test n Tag Elite		308A915	■	■								
Test n Tag Kit		333A970	■	■	■	■						
Bluetooth Thermal Printer		339A930	■	■								
NIMH Batteries & Battery Charger		339A950	■	■			■	■	■	■	■	■
Bluetooth/RS232 Adaptor		339A960	■	■								
Bluetooth/ Test 'n' Tag Printer Adaptor		342A910	■	■								
Log Cards		91B037	■	■	■	■	■	■	■	■	■	■
Pass Labels		91B038	■	■	■	■	■	■	■	■	■	■
Braincells Read/Write Reader		288A910			■	■						
Braincells Self Adhesive Tag (50)		288A953			■	■						
Braincells Cable-Tie Tag (50)		288A954			■	■						
Bluetooth Scanner		339A923	■	■								

Software		PT300	PT350	Supernova Plus	Europa Plus	Europa PAC Plus	PT200*	PT 210*	PT220*	PT100*	PT50*
▼ Software	▶ Tester										
PATGuard Pro 2		■	■	■	■	■	■	■	■	■	■
PATGuard Lite 2		■	■	■	■	■	■	■	■	■	■
PATGuard Elite 2		■	■	■	■	■	■	■	■	■	■
PATGuard Time Manager 2		■	■	■	■						
PATGuard Work About 2		■	■	■	■	■	■	■	■	■	■
PATGuard SQL 2		■	■	■	■	■	■	■	■	■	■

\* Manual input only as tester does not have memory