

MINIATURE BULKHEAD JACKS 70/370 SERIES, TRB/TRT

BJ377 Shown

BULKHEAD JACK
FRONT MOUNT, SOLDER POT

3-lug **BJ770**
Ground tab **BJ770GL**
2-lug **BJ77TL**
4-lug **BJ77FL**
Threaded **BJ377**

(Hermetically sealed version available, pg.13) Mounting Hole: D4.125

BJ79C Shown

BULKHEAD CABLE JACK
TOOL CRIMP

3-lug **BJ79C-△**
2-lug **BJ79CTL-△**
4-lug **BJ79CFL-△**
Threaded **BJ379C-△**

For polarizations, contact the factory. Mounting Hole: D3.109

BJ378 Shown

FEED-THRU BULKHEAD JACK

3-lug **BJ78**
2-lug **BJ78TL**
4-lug **BJ78FL**
Threaded **BJ378**

(Hermetically sealed version available, pg.13) Mounting Hole: D3.187

BJ379-7 Shown

BULKHEAD CABLE JACK
WRENCH CRIMP

3-lug **BJ79-△**
2-lug **BJ79TL-△**
4-lug **BJ79FL-△**
Threaded **BJ379-△**

Mounting Hole: D3.160

BJ76 Shown

BULKHEAD JACK
REAR MOUNT, SOLDER POT

3-lug **BJ76**
2-lug **BJ76TL**
4-lug **BJ76FL**
Threaded **BJ376***

Mounting Holes: D3.240 w/o solder lug/D3.208 w/ solder lug (* Hermetically sealed version avail. pg.13)

BJ75 Shown

INSULATED BULKHEAD JACK
REAR MOUNT, SOLDER POT

3-lug **BJ75**
2-lug **BJ75TL**
4-lug **BJ75FL**
Threaded **BJ375**

Mounting Hole: D2.140

BJ74-9 Shown

INSULATED BULKHEAD CABLE JACK
WRENCH CRIMP

3-lug **BJ74-△**
2-lug **BJ74TL-△**
4-lug **BJ74FL-△**
Threaded **BJ374-△**

Mounting Hole: D2.140

BJ74C-202 Shown

INSULATED BULKHEAD CABLE JACK
TOOL CRIMP

3-lug **BJ74C-△**
2-lug **BJ74CTL-△**
4-lug **BJ74CFL-△**
Threaded **BJ374C-△**

Mounting Hole: D2.140

BJ73 Shown

INSULATED FEED-THRU JACK

3-lug **BJ73**
2-lug **BJ73TL**
4-lug **BJ73FL**
Threaded **BJ373**

Mounting Hole: D2.140

BJ72 Shown

INSULATED BULKHEAD JACK
FRONT MOUNT

3-lug **BJ72**
2-lug **BJ72TL**
4-lug **BJ72FL**
Threaded **BJ372**

Mounting Hole: D2.140

△ - See cable group table on pages 68-88. "D" mounting holes see page 45. For polarizations, contact the factory.