GU280x16G-7806A

Pin

Async

SPI

5V

SCK

/SS

SIN

0V

SOUT

NC

/RES

MB

HB

Sig

VCC

RS

F

D1

D3


D5

D7

280x16 Dot Graphic (2x40 characters)

- q Single 5V Supply
- q
- High Brightness Blue Green Display q Operating Temp -40°C to +85°C
- q
- **3 Multi Sized Fonts** q
- 4/8 Bit Parallel LCD & Serial Interfaces q

The module includes the Vacuum Fluorescent Display glass, VF drivers and micro-controller ICs with refresh RAM, character generator and interface logic. The 4/8 bit parallel & serial bi-directional interfaces are 5V TTL/CMOS compatible. The command set is LCD compatible with extended graphic functions. **CN2 – SERIAL INTERFACE**

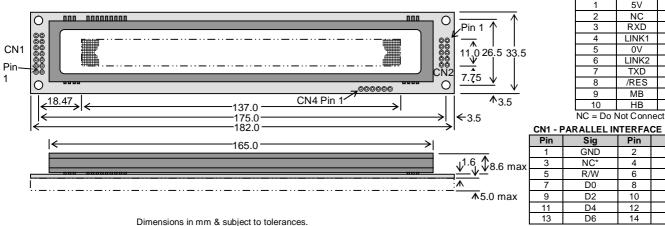

Pin 3 can be changed to /RESET or BUSY terminal and selectable by jumper .12 (2-3) or .12 (1-2)

imensions in mm	& subject to tolerances
Mounting h	oles 3.5mm dia.

Parameter	Symbo	ol	Value	Condition				
Power Supply Voltage	VCC	1	5.0VDC +/- 5%	GND=0V				
Power Supply Current	ICC		400mADC typ.	VCC=5V				
Logic High Input	VIH		0.8VDC min. Vcc max. VCC=5V					
Logic Low Input	VIL	(0VDC min. 0.2VDC max. VCC=5V					
Logic High Output	VOH	;	3.8VDC min. Vcc max.	IOH = 1.5mA				
Logic Low Output	VOL	(VDC min. 0.6VDC max.	IOL =1.6mA				
OPTICAL and ENVIRON	MENT/		ECIFICATIONS					
Parameter			Value					
Display Area (XxY mm)			137.05 x 1100					
Dot Size/Pitch (XxY mm)		0.34 x 0.5 / 0.49 x 0.7					
Luminance	,		500 cd/m ² Typ.					
Colour of Illumination			Blue-Green (Filter for co	olours)				
Operating Temperature			-40°C to +85°C					
Storage Temperature			-40°C to +85°C					
Operating Humidity (non	conden	sina)	20 to 80% RH @ 25°C					
SOFTWARE COMMAND			2010/00/01/01/01/01/01					
Instruction	R/W	RS	D0-D7					
Clear Display	L	L	01H					
Cursor Return Home	L	L	02H					
Entry Mode Set	L		04H-07H					
Display ON/OFF	L		08H-0FH					
Cursor Shift Left	Ē	L	10H					
Cursor Shift Right	L	L	14H					
Display Shift Left	L	L	18H					
Display Shift Right	L	L	1CH					
Select 4/8 bit interface	L	Ē	20H (4Bit) / 30H (8Bit) +	luminance				
Display Luminance	L	н	00H-03H (must follow at					
Set CG RAM Addr.	L	1	40H-7FH	, or o community				
Set DD RAM Addr.	L	L	80H-E7H					
Read BUSY/Addr.	H	L	00H-FFH D7 Busy	= Hiah				
Read Data from RAM	H	H	00H-FFH	J				
Set Graphic Cursor	L	L	F0H + xpos + ypos					
Set Area Commands	L	Ĺ	F1H + x1 + y1 + x2 + y2	+ cmd				
	L	H	where cmd 49H = Inver					
	L	Н	46H = Fill Ar	ea				
	L	Н	43H = Clear	Area				
	Ē	н	4FH = Set C	utline Box				
	L	н	6FH = Clear	Outline Box				
Write Graphic Image	L	L	F1H + x1 + y1 + x2 + y2	+ cmd + data				
Set Font / Spacing	L	L	F2H + font style					
Set RS Low				erial Comms. only				
Read Data				erial Comms. only				
Read Cursor Position	1			erial Comms. only				

CHARACTER SET Sx7 & 10x14 Font LCD Font International Font Sx7 & 10x14 Font LCD Font International Font 00 10 20 20 40 40 20 40 40 40 40 40 40 40 40 40 40 40 40 40															J2	(2-3) o	r J2	(1-	·2)						
Image: 10 20 <th20< th=""> 20 20</th20<>							Г																			
	5xī							_																		
a)a)a)a)a)a)b)b)a) <th></th> <th></th> <th></th> <th>20</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>A0</th> <th>BO</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>AO</th> <th></th> <th>_</th> <th></th> <th></th> <th></th>				20								A0	BO								AO		_			
a = 1 + a = 1 $a = 1 + a = 1$ $a = 1 + a =$			•			a								9												
$\overrightarrow{0}$ or $\overrightarrow{1}$	-						W	-	•								•									m
1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 +	02	UDF3				В						r			· ·	· ·	0		· ·		¢		e		-	ċ
	03	UDF4				0		_			R.										£			்	-3	
a = b = b $a = b$ </td <td>04</td> <td>UDF5</td> <td></td> <td></td> <td>4</td> <td>D</td> <td></td> <td>d</td> <td>t,</td> <td></td> <td></td> <td>۰.</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>Ŀ</td> <td>÷</td> <td></td> <td></td> <td></td> <td>Ö</td> <td></td> <td></td>	04	UDF5			4	D		d	t,			۰.							Ŀ	÷				Ö		
\overline{O} uses \overline{I} <	05	UDF6			5	-			u		Ö														â	
a = b = b $(a = b + b + b + b + b + b + b + b + b + b$	06	UDF7			6				Ų			7			=		2					11				
$0 = 0 = 0 = \frac{1}{2}$ $0 = 1$ $1 = \frac{1}{2}$ $1 = \frac{1}{2$	07	UDF8	l						ω	ö		7				g			ó		8	•				÷
$on \ loops$ $a \ loops$ <td>08</td> <td>UDF1</td> <td></td> <td></td> <td></td> <td>Н</td> <td></td> <td>h</td> <td>×</td> <td></td> <td>1</td> <td>4</td> <td></td> <td>\$</td> <td>Ņ</td> <td>.,"</td> <td>\sim</td> <td></td> <td></td> <td></td> <td></td> <td>۰.</td> <td>È</td> <td>ø</td> <td>è</td> <td></td>	08	UDF1				Н		h	×		1	4		\$	Ņ	.,"	\sim					۰.	È	ø	è	
$on \ loops$ $a \ loops$ <td>09</td> <td>UDF2</td> <td></td> <td>2</td> <td></td> <td></td> <td>Υ</td> <td>i</td> <td>9</td> <td></td> <td>Ç.</td> <td>÷</td> <td></td> <td></td> <td>ıĿ</td> <td></td> <td>Ч</td> <td></td> <td>-</td> <td></td> <td></td> <td></td> <td>É</td> <td>Ù</td> <td>ė</td> <td>ò</td>	09	UDF2		2			Υ	i	9		Ç.	÷			ıĿ		Ч		-				É	Ù	ė	ò
$ab \ borst \ brever \ br$	0A	UDF3	°	:44	:		2	j.	Z			æ				. 1	цť.						E	Ú	\odot	
$acc \ uors \ w \ v \ v \ c \ w \ v \ v \ c \ w \ v \ v \ v \ v \ v \ v \ v \ v \ v$	OВ	UDF4	-				L	K	÷	ü	<u>.</u>	7	ij.			×	л,		Э.	ŗ				Ü	ä	
Image: Construction of the second	ос	UDF5	.4.	;		L		1			2	17	5	7	ņ	¢.	P4		TT.	а	;			ij	ì	
$acc \ lowr 4 b b r $	OD	UDF6	jŀ]	m)	зć		.:1		÷.,		ŧ.,	<u>.</u>		٠Ţ	Ĵ,				Ŷ	í	·
Image: Second	OE	UDF7	4					n	÷		٠ţ٠	=	t						Φ	œ			Ī	þ	ï	
NOTE: UDF characters are available using 5x7 font only. Proportional Mini Font 00 01 02 03 04 05 05 06 07 08 09 0A 08 0C 00 0E 0F 30 11 12 13 14 15 17 18 18 18 18 18 18 18 18 11 18 18 18 18 18 18 18 18 18 18 18 18 18 18 18 18 18	OF	UDF8	.di.	/	2	O		o	÷	9			9	7	e	ö			ω	*		ं	Ï	β	ï	Ŷ
$\begin{array}{ c c c c c c c c c c c c c c c c c c c$					acte				le us			font	only.													
20 I I H	Pro	- - -			-				_		_	_	_	_	_			-								
30 II I II		00		-	-			-			-	-	-	00	-) OE	-									
Image: Second Parallel Second Parallel Second Parallel Second Parallel Second Parallel (default) Image: Second Parallel Second Parallel (default) Image: Second Parallel Second Parallel (default) J5 Interface Interface CN1 Pin 3 Function J5 Interface J2 Font Open Sync Serial / Parallel (default) 1 & 2 & 3 Link Asynchronous Serial All J7 links & J5 should be open for Parallel operation. J3 J6 Mode Signals 1-2 1-2 180 Pin 5 = R/W, Pin 6 = /RD 2-3 J6 Pin 5 = R/W, Pin 6 = /RD Scondat: +1-416-291-2946 J7 Configuration Munchen (D): +49 (0)89-3214-2 0 0 9600, N, 8, 1 L 0 19200, N, 8, 1 V V V V V V							-						-		+	ŀ										
Image: Serial / Parallel Selection CN1 Pin 3 Function J5 Interface J2 Font Open Sync Serial / Parallel (default) 1 & 2 8 Link Asynchronous Serial 1 & 8.2 Busy Parallel Interface type (M68 / i80) Parallel (default) 1 & 8.2 Busy J3 J6 Mode Signals All J7 links & J5 should be open for Parallel operation. 1-2 1-2 i80 Pin 5 = R/W, Pin 6 = /RD CONTACT 2-3 2-3 M68 Pin 5 = R/W, Pin 6 = Z Noritake Sales Office Tel Nos SERIAL MODE T Configuration Nurchen (D): +49 (0)89-3214-2 0 0 12200, N, 8, 1 Uron UK: +44 (0)1493 601144 L 0 38400, N, 8, 1 Www.noritake-itron.com Y Y L Self Tast Mode	30					· ·								-	-	-										
Serial / Parallel SelectionCN1 Pin 3 FunctionJ5InterfaceJ2FontOpenSync Serial / Parallel (default) $2 \& 3$ / ResetLinkAsynchronous Serial1 & 2BusyParallel Interface type (M68 / i80)All J7 links & J5 should be open for Parallel operation.All J7 links & J5 should be open for Parallel operation.J3J6ModeSignals SignalsCONTACT1-2i80Pin 5 = r/W, Pin 6 = r/RDContactNoritake Sales Office Tel Nos Nagoya Japan: +81 (0)52-561-98 Canada: +1-416-291-2946 Chicago USA: +1-487-439-9020J128009600, N, 8, 1Itron UK: +44 (0)1493 601144 Rest Europe: +49 (0)61-0520-92: www.noritake-itron.comYYSelf Tast Mode	40							· ·									0									
J5 Interface Open Sync Serial / Parallel (default) Link Asynchronous Serial Parallel Interface type (M68 / i80) 1 & 2 J3 J6 Mode J2:3 I80 Pin 5 = //WR, Pin 6 = //RD 2:3 2:3 M68 J7 Configuration 1 2 8 O O 9600, N, 8, 1 L O 19200, N, 8, 1 V V L O Co 34400, N, 8, 1 V V V	50	P	Ω	R	5	Т	U	Ų	ы	X	Ϋ́	2	Ē	Ē	1	·^										
J5 Interface Open Sync Serial / Parallel (default) Link Asynchronous Serial Parallel Interface type (M68 / i80) 1 & 2 J3 J6 Mode J2:3 I80 Pin 5 = //WR, Pin 6 = //RD 2:3 2:3 M68 J7 Configuration 1 2 8 O O 9600, N, 8, 1 L O 19200, N, 8, 1 V V L O Co 34400, N, 8, 1 V V V	Se	eria	1/1	Par	alle	el S	ele	cti	on							CN	1 P	in 3	F	ınc	tio	n				
Link Asynchronous Serial 1 & 2 Busy Parallel Interface type (M68 / i80) All J7 links & J5 should be open for Parallel operation. 1-2 1-2 i80 Pin 5 = /WR, Pin 6 = /RD 2-3 M68 Pin 5 = R/W, Pin 6 = /RD 2-3 M68 Pin 5 = R/W, Pin 6 = /RD SERIAL MODE Topological Noritake Sales Office Tel Nos Nagoya Japan: +81 (0)52-561-98 Canada: +1-416-291-2946 J Z Serial Noritake Sales Office Tel Nos Nagoya Japan: +81 (0)58-3214-2 O O 9600, N, 8, 1 Itron UK: +44 (0)1493 601144 L O 38400, N, 8, 1 Itron UK: +49 (0)61-0520-92: Y Y Self Tast Mode www.noritake-itron.com		J5						Inte	erfa	ace							J2						For	nt		
Parallel Interface type (M68 / i80) All J7 links & J5 should be open for Parallel operation. J3 J6 Mode Signals 1-2 1-2 i80 Pin 5 = /WR, Pin 6 = /RD 2-3 2-3 M68 Pin 5 = R/W, Pin 6 = E SERIAL MODE J7 Configuration 1 2 8 0 0 9600, N, 8, 1 L 0 19200, N, 8, 1 V V V V V Self Tast Mode	0	per	۱	S	Syn	сS	eria	al /	Pa	ralle	el (o	defa	ault)		2	2&	3				/	Re	set		
Parallel miterinterinterinterinterinterinterinteri	L	.ink				As	yno	chro	ono	us	Sei	rial														
Jo Mode Signals 1-2 1-2 180 Pin 5 = /WR, Pin 6 = /RD 2-3 2-3 M68 Pin 5 = R/W, Pin 6 = /RD SERIAL MODE Nagoya Japan: +81 (0)52-561-98 JT Configuration Chicago USA: +1-847-629-624 JZ 8 Munchen (D): +49 (0)89-3214-2 O O 9600, N, 8, 1 L O 12200, N, 8, 1 V Y L O 12200, N, 8, 1 Www.noritake-itron.com www.noritake-itron.com	Pa	rall	el I	nte	erfa	ce	typ	e (M6	8 / i	i80)										uld	be	op	en	for
2-3 2-3 M68 Pin 5 = R/W, Pin 6 = E Noritake Sales Office Tel Nos SERIAL MODE J7 Configuration 1 2 8 Canada: +1-416-291-2946 Chicago USA: +1-847-439-9020 0 0 9600, N, 8, 1 Unchen (D): +49 (0)89-3214-2 Itron UK: +44 (0)1493 601144 L 0 19200, N, 8, 1 Ucols 200, N, 8, 1 Ucols 200, N, 8, 1 V V V Self Tast Mode www.noritake-itron.com	J	3	J6	Μ	ode] '	Para	alle	ор								
Nagoya Japan: +81 (0)52-561-98 Canada: +1-416-291-2946 J7 Configuration 1 2 8 0 0 9600, N, 8, 1 L 0 19200, N, 8, 1 O L 0 V Y L Self Late Self Late		-		-		I									- r											
SERIAL MODE Configuration J7 Configuration 1 2 8 O O 9600, N, 8, 1 L O 19200, N, 8, 1 V Y V Y V Self Test Mode	2-	3	2-3	N	168		Pi	n 5	= F	۱۸	, P	in 6	sे = ∣	E	1	Na	Nor	ital	e S	sal an:	<u>es</u>	Off	1Ce	2-5	<u>ei N</u>	05
1 2 8 0 0 9600, N, 8, 1 L 0 19200, N, 8, 1 O 1 200 0 1 200 1 2 8 Munchen (D): +49 (0)89-3214-2 1 Itron UK: +44 (0)1493 601144 Rest Europe: +49 (0)61-0520-92: Www.noritake-itron.com www.noritake-itron.com	SE	RI		MC	DE											ind										
O O 9600, N, 8, 1 Itron UK: +44 (0)1493 601144 L O 19200, N, 8, 1 Rest Europe: +49 (0)61-0520-92: O L O 38400, N, 8, 1 Y Y L Self Test Mode			J7	/				C	on	figu	ıra	tio	า			C	hic	ag	b U	SA	: +	1-8	47-	43	9-9	020
O O 9600, N, 8, 1 Itron UK: +44 (0)1493 601144 L O 19200, N, 8, 1 Rest Europe: +49 (0)61 0520 92: O L O 38400, N, 8, 1 Y Y L Self Test Mode	1		2		8											Μ	un	che	n (D):	+4	9 ((0)8	9-3	214	1-2
L O O 19200, N, 8, 1 O L O 38400, N, 8, 1 Y Y L Self Tast Made	C)	0		0			ę	960	0, 1	۷, ٤	3, 1				Itron UK: +44 (0)1493 601144										
O L O 38400, N, 8, 1 www.noritake-itron.com	L	-	0	1	0			1	920)0,	N,	8, 1				Re	st I	Eur	оре	e: +	49	(Ó)	61·	-05	20-	92
X X I Self Test Mode	C)	L		0										11		2	ww	w.r	ori	tak	e-i	tro	n.c	om	1
	_		X		Ľ	1									ᅱᄔ	_				- 1-			241			

х х Copyright 2007 Noritake Itron Corp. Japan

GU280x16G-7806A

ILIK Doc Ref: 10405 Jss:5 09Oct07

NORITAKE ITRON VFD MODULES

GU280x16G-7806A


SOFTWARE COMMA	NDS	
Instruction	Data Format (RS = 1)	Description
UDF Write	00H – 0FH	Write user defined character 1-8 to the current cursor location on the display.
Data Write	00H – FFH	Write data to the display. In normal (LCD compatible) mode of operation, data is written to the display data (DD
(40us – LCD compatible mode) (250us – Graphic mode)		RAM) or character generator (CG RAM). When using the graphical data commands (F0H, F1H & F2H), data is written direct to the display and is not
		stored in DD RAM. Data write busy times will increase when using the graphic functions.
Data Read	00H – FFH	Read data from the display. In normal (LCD compatible) mode of operation, data is read from the display data
(40us - LCD compatible mode)		(DD RAM) or character generator (CG RAM).
Instruction	Data Format (RS = 0)	Description
Status / Cursor Position	00H - FFH	D0 – D6 of read data corresponds to the current cursor position. D7 shows the status of busy.
Read (40us – LCD compatible mode)		
Display Clear (150µs)	01H	Fills all locations in the display data (DD) RAM with 20H (blank character). The address counter is set to 0 in the DD RAM. The address counter is set to increment on each data read/write. Any display offset (using the display shift command) is removed.
Cursor Home	02H	The address counter is set to 0 in the DD RAM. Any display offset (using the display shift command) is removed.
(500µs)	04H – 07H	Dit 1 is used to callect the direction of the address counter on each data read or write. If not to '4', the address
Entry Mode (40µs)	040 - 070	Bit 1 is used to select the direction of the address counter on each data read or write. If set to '1', the address counter is incremented. If set to '0', the address counter is decremented. Bit 0 enables the display to shift on each data read/write. If this bit is set to '1', the display is shifted with the cursor. The display shift direction depends upon the address counter direction (bit1). If this is set to increment, the display is shifted left, if the address counter is set to decrement, the display is shifted left, if the address counter is set to decrement, the display is shifted right. Note: When display shift is enabled, the data write busy time can increase by 300us.
Display Control (50us)	08H-0FH	Bit 2 is used to enable or disable the display. If this bit is set to '0' the VFD's power supply is turned off to reduce power consumption. Bit 0 enables the flashing block cursor.
		Note: If the cursor is enabled, busy times can increase by 20us.
Cursor Shift Left	10H	Shift the cursor position (address counter) one position to the left.
Cursor Shift Right	14H	Shift the cursor position (address counter) one position to the right.
Display Shift Left	18H	Shift the display left, one character position.
(150us) Display Shift Right	1CH	Shift the display right, one character position.
(150us) Select 4 bit interface	20H + lum (RS=1)	Enables 4-bit communications. Data is received on DB4-DB7 only. Two writes are required to send one data
(40μs)		byte. The most significant nibble should be sent first. Refer to the 'Parallel Communications' section for more information. The <i>lum</i> value sets the displays brightness, and must be sent with the RS line high: - 00H = full brightness, 01H = 75%, 02H = 50% & 03H = 25%.
Select 8 bit interface	30H + lum (RS=1)	Enables 8-bit communications. Data is received on DB0-DB7. The <i>lum</i> value sets the displays brightness, and must be sent with the RS line high: - 00H = full brightness, 01H = 75%, 02H = 50% & 03H = 25%.
Set CG Address	40H – 7FH	Set the character generator address (CG RAM). All written data is placed within the user definable character area.
Set DD Address	80H – E7H	Set the display data address (DD RAM). 80H – A7H = top line. C0H – E7H = bottom line.
Set Graphic Cursor *Note (40us)	F0H + xpos + ypos	Set the absolute cursor position. $xpos = 0 - 279$, $ypos = 0 - 15$. 2-bytes are required to send the horizontal position $xpos$. The upper byte precedes the lower byte. Co-ordinates should be written with RS line set high.
Set Area *Note	F1H + x1 + y1 + x2 + y2 +	Area Commands: - 'l' - invert area, 'F' - fill area, 'C' = clear area, 'O' - set outline, 'o' - clear outline.
(40us + 500us[cmd byte])	cmd	All area commands should be preceded with the area co-ordinates. X1 Y1 left top X2 Y2 bottom right. Co-ordinates and command should be written with RS line set high.
Write Graphic Image *Note	F1H + x1 + y1 + x2 + y2 +	2-bytes are required to send the horizontal positions X1 & X2. The upper byte precedes the lower byte. Image Commands: - 'H' – write horizontal graphical data with horizontal cursor movement.
(40us + 500us[cmd byte])	cmd	 'V' – write vertical graphical data with horizontal cursor movement. 'h' – write horizontal graphical data with vertical cursor movement. 'v' – write vertical graphical data with vertical cursor movement. Graphical data should immediately follow the 'H','h','V' and 'v' commands. Co-ordinates, command and graphical data should be written with RS line set high.
o		2-bytes are required to send the horizontal positions X1 & X2. The upper byte precedes the lower byte.
Set Font *Note	F2H + font	Select font type, font size and font spacing.
(40us)		Font commands: - 'A' or 'a' = proportional 64 character mini-font. 'B' = 5x7 LCD compatible font with Katakana characters.
		'C' = 10x14 LCD compatible font with Katakana characters.
		b' = 5x7 international font with European characters.
		'c' = $10x14$ international font with European characters. '1' = set the inter-character pixel spacing to 1 pixel.
		2' = set the inter-character pixel spacing to 2 pixels.
		Font command should be written with RS line set high.
Port Configure	F4H + byte	Bit 7 High = I/O Port, Low = Serial Port. See extended port and serial commands.
Read Port Status Port Out / Serial Send	F5H	The current port status is read with RS high. See extended port and serial commands.
Port Out / Serial Send	F6H + <i>byte</i> F7H	<i>byte</i> is output from the port. In serial mode check the busy status before sending again. The current port levels or buffered received data can be read with RS high.
Port Buffer Send	F8H + size + data	Up to 128 bytes of data can be buffered before being transmitted from the serial port.
Instruction	Data Format	Additional Serial Data Commands
Set RS Low	OFH	Set the RS line low for the following byte only. Used in serial communications only.
Read Data	FEH	Read data at current cursor position. This command is used with serial communications only.
Read Cursor Position	FFH	Read current cursor position. This command is used with serial communications only.

Note: After these commands are executed, the cursor will be disabled and any character data will be written to the display only, and not the DD RAM. Any subsequent LCD compatible command will re-enable the cursor and allow for DD RAM writing.

NORITAKE ITRON VFD MODULES


GU280x16G-7806A


GRAPHICAL DATA WRITES

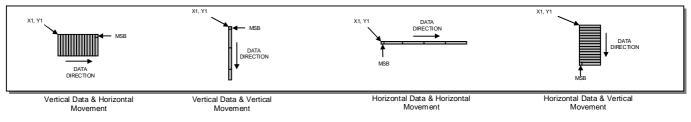


PARALLEL COMMUNICATIONS

This module has a fast latching 8-bit data bus. The 'RS' and 'R/W' control lines should be set prior to the rising edge of the 'E' enable line. Data is clocked in on the falling edge of the enable line. The busy line should be checked before sending data.

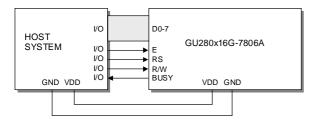

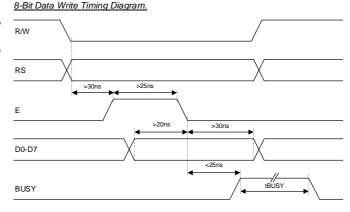


8-Bit Data Read Timing Diagram.

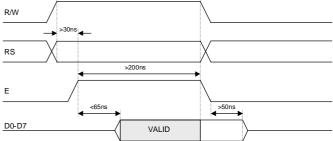


The data bus width can be selected for 4-bit operation, using data lines D4-D7. Within this mode, two writes are required to send one data byte. The high nibble (bits 4-7) should be sent first, followed by the low nibble (bits 0-3). The busy state is not triggered between nibbles. It is important that the status is NOT read within 40us of sending the command to set either 4 or 8 bit mode.

address (RS line low). The busy state can also be monitored directly from CN1 pin 3 if link J2 is set to 2&3.

 The busy state can be monitored on D7 when reading the DDRAM




4-Bit Data/Command Write Timing Diagram.

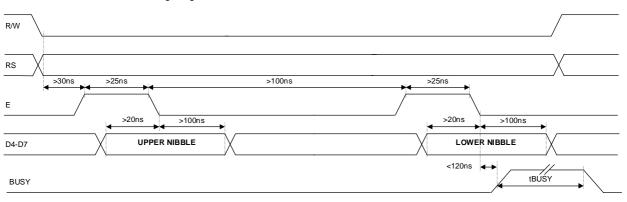

NORITAKE ITRON VFD MODULES

BUSY

4-Bit Data/Status Read Timing Diagram.

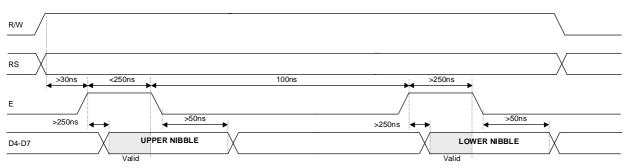

ASYNCHRONOUS SERIAL COMMUNICATION

Asynchronous & synchronous serial interfaces are provided at TTL level. Synchronous is enabled with parallel, first received byte disables the other. To enable Asynchronous Serial Mode connect pin 4 and 6 on CN2 (LINK1 and LINK2), Link J5 and enable i80 Mode on J3 and J6. When using Asynchronous serial communications, the module is automatically initialized at power-up/reset with the cursor enabled.

Host to Module Write

Module to Host Write

START D0 D1 D2 D3 D4 D5 D6 D7

 
~200

RXD

MB

тхр


ΗВ




The host busy line (HB) stops the module from sending data to the host. The use of the HB and MB lines are optional, and can be connected together if not required.

SYNCHRONOUS SERIAL COMMUNICATION

 With synchronous communications enabled, data can be clocked into the VFD module on the rising edge of SCK, with the MSB sent first. The host must provide adequate delays for the module to process the data, these busy times are specified in the software command section. Alternatively the host can monitor the MB (Module Busy) line.




The /SS pin can be used as an enable pin if other devices are connected to the serial line, and also allows byte synchronisation. The use of the /SS line is recommended, but can be permanently pulled low if not required.

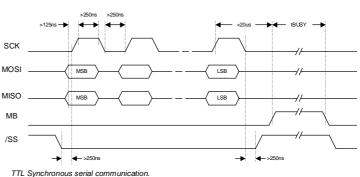

SERIAL CONTROL

 An additional command has been included to distinguish between command and data writes when using serial communications. This command (0FH) will temporarily set the RS line low for the subsequent written byte. The following example displays two text messages using the serial communications and the 'Set RS' command: -



NORITAKE ITRON VFD MODULES

GU280x16G-7806A

LCD COMPATIBILITY

This module features a command set that is LCD compatible, allowing easy replacement in existing equipment with little or no modifications. Careful consideration should be taken regarding the command execution times of this module. Although the commands can be executed within 40us, which is normal for LCD, busy times are increased when using the scroll write modes and with the cursor enabled. When using the 4-bit parallel mode, a 40us delay is required between nibbles. Also reading back data in 4-bit parallel mode is not supported. DD RAM address locations 70H+ are used to access the extended graphic commands.

At power up and reset the module is automatically initialised and ready to receive data. The interface is set to 8-bit, the display is cleared, the cursor position is set to the top-left corner (DD RAM address = 00H), and the display luminance is set to 100%.

RESET

At power ON the modules internal reset requires at least 8mS before commands can be sent. Please check the busy status. If you connect pin 3 to the hardware reset using jumper 3, the module will require 3mS to re-ilitialize. Reset is achieved by high-low-high transition of at least 100nS.

EXTENDED GRAPHIC COMMANDS

Command Structure and Values Copyright 2007 Noritake Co Limited, Japan

In addition to the standard LCD commands, this module includes additional commands to display graphical data, different font sizes, fill, clear and invert defined areas of the display. Also an outline command is available to draw rectangles around objects. When any of these extended commands are executed, the module will change to the 'graphics' mode of operation. This graphics mode allows text to be written to any part of the display.


There are many differences the user should be aware of when the display is in this graphics mode: -

Written data may require additional busy times. Text data is not written into the DD RAM and therefore can not be read back. Graphical text can not be shifted onto the display. The cursor is disabled & cursor direction is set to increment only. UDF characters cannot be written.


The graphics mode is disabled as soon as any valid LCD command is received.


DISPLAYING GRAPHICAL TEXT

The module contains 3 font sizes, a proportional mini-font, 5x7 pixel, and a 10x14 pixel font. Graphical text can be written to any part of the display using the 'Set Graphic Cursor' command (F0H). Characters are positioned above the current cursor position. Each character written will include either a one pixel or two pixel space to the right side of the character. After each character is written to the display, the cursor position is automatically advanced. If the cursor position reaches the end of the display, the host must reposition to the next line.

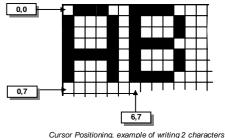


 Cursor Positioning, example of writing 2 characters from cursor position 0,7.

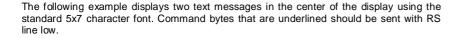



 The next example displays one line of text using the 10x14 character font. Command bytes that are underlined should be sent with RS line low.





NORITAKE ITRON VFD MODULES

GU280x16G-7806A


5CH 48H 3EH 1DH 1DH

14H 36H

DISPLAYING GRAPHICS

Graphical images can be displayed on the VFD module in either a horizontal or vertical byte orientation. After each graphical data write, the cursor is automatically advanced. All graphical data is contained within the defined area. Unused bits are masked where the screen area is not a byte multiple

The following example displays a simple graphical image. The graphical data orientation is set to horizontal data format, with a vertical cursor movement. Command bytes that are underlined should be sent with RS line low.

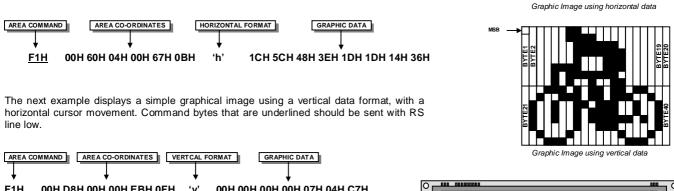


 F1H
 00H D8H 00H 00H EBH 0FH
 'v'
 00H 00H 00H 00H 00H 07H 04H C7H FEH 72H 73H 32H 3EH 3FH 1DH 00H 00H 00H 00H 00H 00H 00H 00H 00H 3CH 42H 81H B9H C1H 42H 7CH 20H D8H FCH 3CH FCH CAH 49H B1H 89H 42H 3CH 00H
 Image: Comparison of the comparison of th

AREA COMMANDS

The VFD module contains commands to fill, clear and invert defined areas of the display. Also an outline command is available to draw rectangles around objects.

The following example displays three options for the user to select, each option is contained within a box with a shadow effect. Drawing horizontal and vertical lines using the fill area command creates the shadow effect. Command bytes that are underlined should be sent with RS line low.

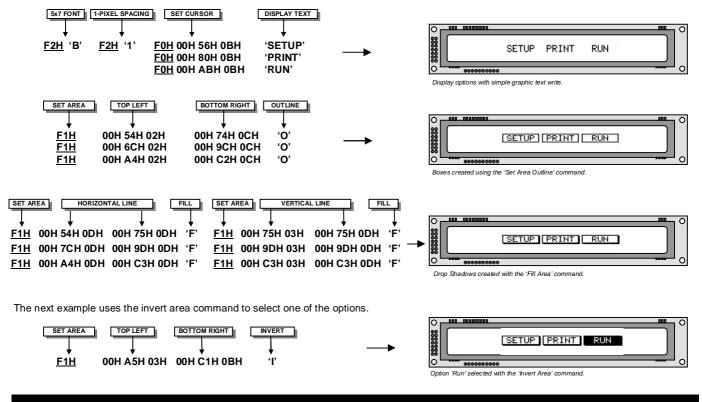

NORITAKE ITRON VFD MODULES

GU280x16G-7806A

EXTENDED PORT AND SERIAL COMMANDS

Command Structure and Values Copyright 2007 Noritake Co Limited, Japan

The extended port and serial commands are only valid when the display is connected to the host using the parallel interface.

vcc

7806A

PORT I/O MODE

The I/O mode gives direct access to the 7 control lines on the serial connector; HB, MB, TXD, RXD, MISO, MOSI and SCK. Each line can be individual set to an Input or Output using the 'PORT CONFIGURE' command. All inputs include an optional pull-up resistor, 30K-120K in value. The outputs can source ~5mA and sink ~30mA. There are 3 commands available to configure port, set port level and read port state.

Example: -

F4H 82H Set RXD to input and other ports to outputs. F6H 02H Turn on LED1&2 by setting HB & MB HB MB low. Enable internal pull-up resistor on RXD RXD F7H Read port, D1 is the switch state. GND

PORT CO	ONFIGUE	<u>RE</u>	F4	4H + I/O						
D7	D6	D5	D4	D3	D2	D1	D0			
1	HB I/O	MB I/O	TXD I/O	MISO I/O	MOSI I/O	RXD I/O	SCK I/O			
A '1' defines the port as an input, '0' an output. All ports are subsequently set low.										
PORT OUT F6H + OUT										
	<u>.</u>									
D7	D6	D5	D4	D3	D2	D1	D0			
		D5 MB OUT					D0 SCK OUT			
D7 - A '1' sets	D6 HB OUT	мв оит espondin	TXD OUT	_{D3} MISO OUT h, and a	MOSIOUT	RXD OUT t low. If ti				

D7	D6	D5	D4	D3	D2	D1	D0				
-	HB IN	MB IN	TXD IN	MISO IN	MOSI IN	RXD IN	SCK IN				
The current port levels are read with RS bigh											

The current port levels are read with RS high.

SYNCHRONOUS SERIAL MODE

This mode gives the ability to control external synchronous devices connected to the serial connector. Data is transmitted and received on each 'PORT OUT' command. The received data byte is buffered until the 'PORT READ' command is executed.

The 'PORT BUFFER SEND' command will buffer up to 128 bytes of data prior to transmission; only the last data byte received is captured when using this command.

The 'PORT CONFIGURE' command will set the MOSI & SCK lines to outputs, and the MISO line to an input. The HB line is used as an optional busy input, and the MB line is set to an output. The TXD line is also set to an output, and this can be used as a reset or device select control line.

The serial transmission is defined by the 'DEF H/L' (default clock level high or low), 'CLK EDGE' (rising or falling clock edge), and the 'SPEED' (clock speed) control bits. The 'HNDSHK' bit is used to detect the status of the HB line prior to data transmit. All data is transmitted MSB first.

A 'STATUS READ' command can be used to check for completed data transmission.

Example: -

- F4H 1BH Enable Synchronous mode with busy test; clock speed to 125kHz, data clocked on falling edge, default clock level is low. F6H 55H -Send byte 55H to synchronous port when HB line is low.
- Read current status. Wait until TXC is set. F5H
- F5H Read current status. Check if RXC is set.
- F7H Read received byte.

F8H 16H "This is a test string." - Send character string when HB line is low. - Read current status. Wait until TXC is set.

PO	ORT CO	ONFIGUR	<u>E</u>	F4				
	D7	D6	D5	D4	D3	D2	D1	D0
	0	0	TXD OUT	HNDSHK	DEF H/L	CLK EDGE	SPEED1	SPEED0
Th		nort ic. c	ot high w	(ith a '1')	and low y	with a '0'	Ruev de	toction ic

and low with a '0'. Busy detection is The TXD port is set high with a '1 enabled by setting HNDSHK to a '1'. The default clock level is high with DEF H/L set to a '1', low if '0'. The CLK EDGE is set to rising with a '1', and falling with a '0'. The clock speed is set with the SPEED1/0 bits, 00=4Mhz, 01=1Mhz, 10=250kHz, 11=125kHz.

SERIAL SEND

Data is transmitted to the synchronous serial port. If the 'HNDSHK' bit is enabled, transmission will be delayed until the HB line is pulled low.

F6H + DATA

PORT BUFFER SEND F8H + SIZE + DATA

A maximum of 128-bytes of data is buffered before transmission to the synchronous serial port. If the 'HNDSHK' bit is enabled, transmission is delaved until HB line is low.

READ PORT STATUS

READ P	ORT STA	TUS	F	5H			
D7	D6	D5	D4	D3	D2	D1	D0
-	-	-	HB IN	TX PEND	TXC	RXC	-

The current port status is read with RS high. TX PEND shows data is pending for transmission. TXC transmission completed, and RXC shows data received. HB IN shows the current state of the 'HB' line. TXC is cleared after status read.

SERIAL READ

F7H The currently buffered data byte can be read with RS high. The host should first check the RXC bit using the PORT STATUS command. After reading the data byte, the RXC bit is cleared.

NORITAKE ITRON VFD MODULES

ASYNCHRONOUS SERIAL MODE

This mode gives the ability to control external asynchronous devices connected to serial connector. Data is transmitted on each 'PORT OUT' command. Data received is held within a 1 byte buffer until the 'PORT READ' command is executed.

The 'PORT BUFFER SEND' command will buffer up to 128 bytes of data prior to transmission.

The 'PORT CONFIGURE' command will set the TXD & MB lines to outputs, and the RXD line to an input. The MISO line is also set to an output, and this can be used as a reset or device select control line. The HB line is used as an optional busy input. The MB line mirrors the RXC status flag, and indicates that data has been received.

A 'STATUS READ' command can be used to check for completed data transmission.

Data Write Example: -

F4H 5AH - Enable Asynchronous mode with busy test; set interface to 19200E.

- F6H 55H - Send byte 55H to asynchronous port when HB line is low.
- Read current status. Wait until TXC is set. F5H

F6H AAH - Send byte AAH to asynchronous port when HB line is low.

 F8H 16H "This is a test string."
 - Send character string when HB line is low.

 F5H
 - Read current status. Wait until TXC is set.

Data Read Example: -

- F5H - Read current status. Repeat until RXC is set.
- F7H - Read received byte.

PORT CONFIGURE F4H + SETUP

D7	D6	D5	D4	D3	D2	D1	D0
0	1	MISO OUT	HNDSHK	PARITY1	PARITY0	BAUD1	BAUD0

The MISO port is set high with a '1' and low with a '0'. Busy detection is enabled by setting HNDSHK to a '1'. The parity is set with the PARITY1/0 bits, 00=none, 10=even & 11=odd. The baud rate is set with the BAUD1/0 bits, 00=4800, 01=9600, 10=19200 & 11=38400.

SERIAL SEND

Data is transmitted to the asynchronous serial port. If the 'HNDSHK' bit is enabled, transmission will be delayed until the HB line is pulled low.

F6H + DATA

PORT BUFFER SEND F8H + SIZE + DATA

A maximum of 128-bytes of data is buffered before transmission to the asynchronous serial port. If the 'HNDSHK' bit is enabled, transmission is delayed until HB line is low

READ PORT STATUS

READ PO	ORT STA	TUS	F	5H			
D7	D6	D5	D4	D3	D2	D1	D0
-	-	-	HB IN	TX PEND	тхс	RXC	RX ERR

The current port status is read with RS high. TX PEND shows that data is pending for transmission, TXC transmission was completed, and RXC shows data has been received. RX ERR indicates a received parity, overrun or framing error. HB IN shows the current state of the 'HB' line. The TXC bit is cleared after status read.

SERIAL READ F7H

The currently buffered data byte can be read with RS high. The host should first check the RXC bit using the PORT STATUS command. After reading the data byte, the RXC bit is cleared.

NORITAKE ITRON VFD MODULES

GU280x16G-7806A