

Instructions for use

JetStar – Inkjet film for Epson Printers

100-070	A4 10 sheet pack
100-071	A4 100 sheet pack
100-072	A3 10 sheet pack
100-073	A3 100 sheet pack

1. Set printer to high resolution dpi
2. Print onto the smooth side of the film
3. Allow to dry before use.

NOTE:

If any streaking or smudging occurs, it may be because the moving print head is in contact with the film before the ink is dry. To correct this, try making a mechanical adjustment to the printer by following the printer manufacturer's instructions to move the print head further away. This adjustment is often made when printing on thick paper or card.



MEGA ELECTRONICS LIMITED.

Mega House, Grip Industrial Estate,
Linton, Cambridge, England, CB1 6NR

Telephone: +44 (0) 1223 893900 Fax: +44 (0) 1223 893894

email: sales@megauk.com

web: www.megauk.com