
CURRENT SENSING RELAYS

CO SERIES OVERCURRENT AC PLUG-IN

The CO Series is used to detect an overcurrent condition. The pick-up current setting is user-adjustable within one of three ranges as shown in the Product Selection Table below. An external current transformer can be used to extend the range beyond 10 amperes.

Choose between a fixed drop-out current setting at 95% of the selected pick-up setting or an adjustable drop-out setting of 50-95% of the selected pick-up setting. The relay will energize when the monitored AC current is above the pick-up setting for a period longer than

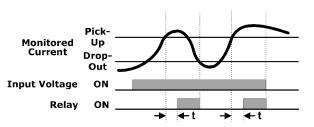

the adjustable time delay (t) of 0.1-10 seconds. This delay prevents nuisance tripping caused by inrush currents. It will de-energize when the monitored AC current is below the drop-out setting.

SPDT 8 Pin Plug-in

Pick-up Setting	Drop-Out Setting	Input Voltage	Current Range Monitored	Product Number	Wiring/ Socket
Adjustable (Across Monitored	Fixed (At 95% of Pick-Up)	24V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COP01A68 COP05A68 COP10A68	8 Pin 70169-D MONITORED CURRENT V
Range)		120V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COP01A62 COP05A62 COP10A62	3 4 5 6
Adjustable (Across Monitored	Adjustable (From 50-95% of Pick-Up)	24V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COKP01A68 COKP05A68 COKP10A68	DIAGRAM 21
Range)		120V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COKP01A62 COKP05A62 COKP10A62	

DPDT 11 Pin Plug-in

Pick-up Setting	Drop-Out Setting	Input Voltage	Current Range Monitored	Product Number	Wiring/ Socket				
Adjustable (Across Monitored	Fixed (At 95% of Pick-Up)	24V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COP01A28 COP05A28 COP10A28	11 Pin 70170D MONITORED				
Range)		120V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COP01A22 COP05A22 COP10A22	CURRENT 4 5 6 7 8 4 7 8 7 8 7 8 7 8 7 8 7 8 7 8 7 8 7				
Adjustable (Across Monitored	Adjustable (From 50-95% of Pick-Up)	24V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COMP01A28 COKP05A28 COKP10A28	~ V ~				
Range)		120V AC	0.1 - 1A 0.5 - 5A 1 - 10A	COKP01A22 COKP05A22 COKP10A22	DIAGRAM 22				

Application Data & Dimensions-Page 21 Sockets & Accessories-Pages 80 & 81



- Monitors AC single phase currents for overcurrent conditions
- Three separate current monitoring ranges covering 0.1
 10 amperes
- External CT can be used to extend ranges
- Adjustable Pick-up Setting with either Fixed or Adjustable Drop-out Setting
- Adjustable time delay of 0.1-10 seconds on pick-up
- LED indicates output relay status
- ◆ Choice of compact 8 Pin SPDT or 11 Pin DPDT plug-in case
- ◆ 10A output contacts
- c**%**us ((





800-238-7474

www.macromatic.com sales@macromatic.com

CURRENT SENSING RELAYS

CM, CO & CU SERIES

AC PLUG-IN APPLICATION DATA & DIMENSIONS

APPLICATION DATA

Input Voltage Tolerance:

AC Operation: +10/-15% of nominal at 50/60 Hz.

Load (Burden):

Less than 5VA

Current Settings:

CM & CO Series

Pick-up: Adjustable throughout current range monitored Drop-out: Fixed at 95% of pick-up setting (CMP & COP

Series); or Adjustable from 50-95% of pick-up

setting (CMKP & COKP Series)

CU Series

Pick-up: Fixed at 5% above adjustable drop-out setting Drop-out: Adjustable throughout current range monitored

Response Times:

CM Series

Pick-up: Fixed 100ms Drop-out: Fixed 100ms

CO Series

Pick-up: Adjustable 0.1-10 seconds

Drop-out: Fixed 100ms

CU Series

Pick-up: Fixed 100ms

Drop-out: Adjustable 0.1-10 seconds

Output Contacts:

10A @ 240V AC/30V DC, 1/2HP @ 120/240V AC (N.O.), 1/3HP @ 120/240V AC (N.C.)

Life:

Mechanical: 10,000,000 operations Full Load: 100,000 operations

Temperature:

-28° to 55° C (-18° to 131° F)

Indicator LED: Green when Input Voltage is applied;

Red when Relay is energized

Reset: Automatic

Mounting:

Requires an 8 or 11 pin octal socket--see page 80.

Approvals:


File #E109466

LISTED CONT. EQUIP with

 ϵ Low Voltage & EMC Directives EN60947-1, EN60947-5-1

appropriate socket File #E109466

DIMENSIONS =

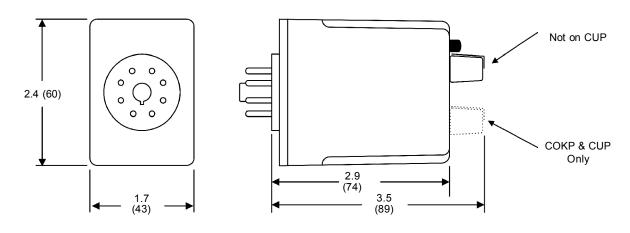

All dimensions are inches (millimeters)