

AMP* INSERTION/EXTRACTION TOOL 91232-1

REDUCED FOR PACKAGING

IS 6631

RELEASED 12-15-88

CUSTOMER HOTLINE 1 800 722-1111

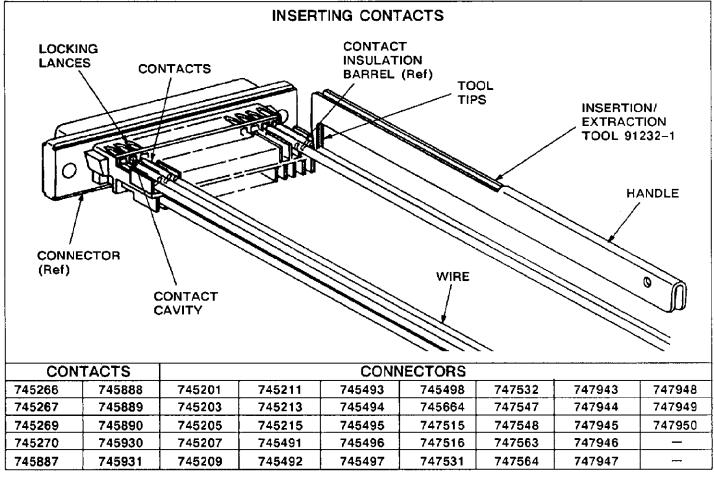


Fig. 1

1. INTRODUCTION

AMP Insertion/Extraction Tool 91232-1 is designed to insert or extract AMPLIMITE* HDE pin and socket contacts into or from HDE connectors. The tweezer-shaped tool features two tips for grasping the contact lances which lock the contact into the housing, and a handle which assists in applying even pressure to the tool tips. Refer to Figure 1 for the selection of HDE contacts and connectors.

Read these instructions thoroughly before using the tool.

NOTE


All dimensions on this instruction sheet are in inches.

2. INSERTION PROCEDURE (Figure 1)

- 1. Grasp wire with tool tips at the rear of the contact insulation barrel.
- 2. Insert contact into contact cavity until the contact locking lances engage.
- 3. Remove the tool. Pull back lightly on the wire to make certain contact is locked in the contact cavity.

3. EXTRACTION PROCEDURE (Figure 2)

- 1. Insert tool tips into front of contact cavity over the tapered points of contact locking lances.
- 2. Keeping tool tips bottomed, slightly squeeze tips together and pull back on the tool. The tips will depress locking lances and start contact out of the cavity.
- 3. Remove tool from the contact cavity.
- 4. Grasp wire and pull contact out of cavity.

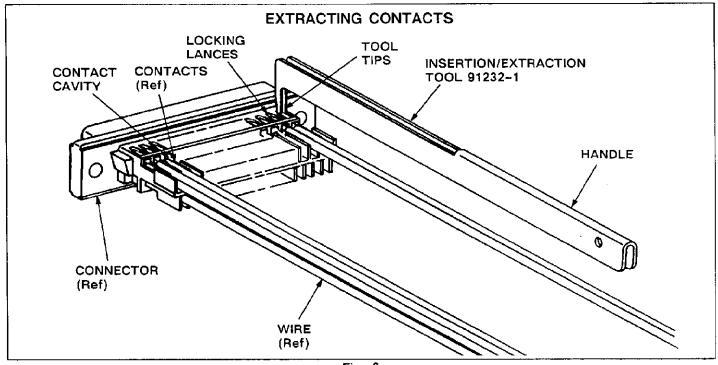

4. TOOL INSPECTION

AMP Insertion/Extraction Tool 91232-1 is inspected before shipment. AMP recommends that the tool be inspected immediately upon arrival in your facility to ensure that the tool has not been damaged during shipment, and that the tool conforms to the dimensions provided in Figure 3.

Fig. 2

Additional tools can be purchased by contacting:

AMP Incorporated P.O. Box 3608 Harrisburg, PA 17105-3608

or a wholly owned subsidiary of AMP incorporated.

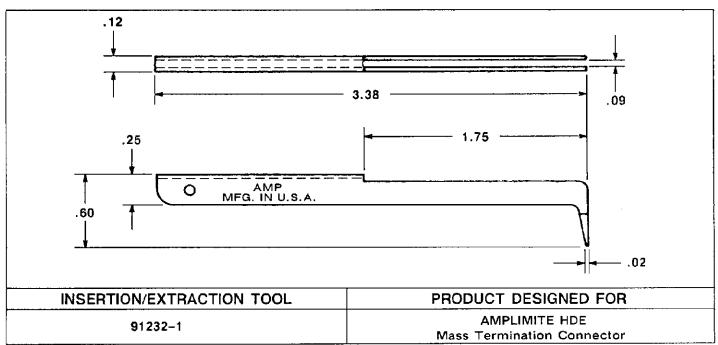


Fig. 3