Basic





CAL Adjusting program (CAL): For quick setting of the balance's accuracy. External adjusting weight required.

 
UNIT to e.g. non-metho and touch of a key. See balance

0.00


Weighing units: can be switched to e.g. non-metric units at the model.

TAR Tare: put back displayed value to "0" during weighing process, e.g. to add or remove weighing material from a container.







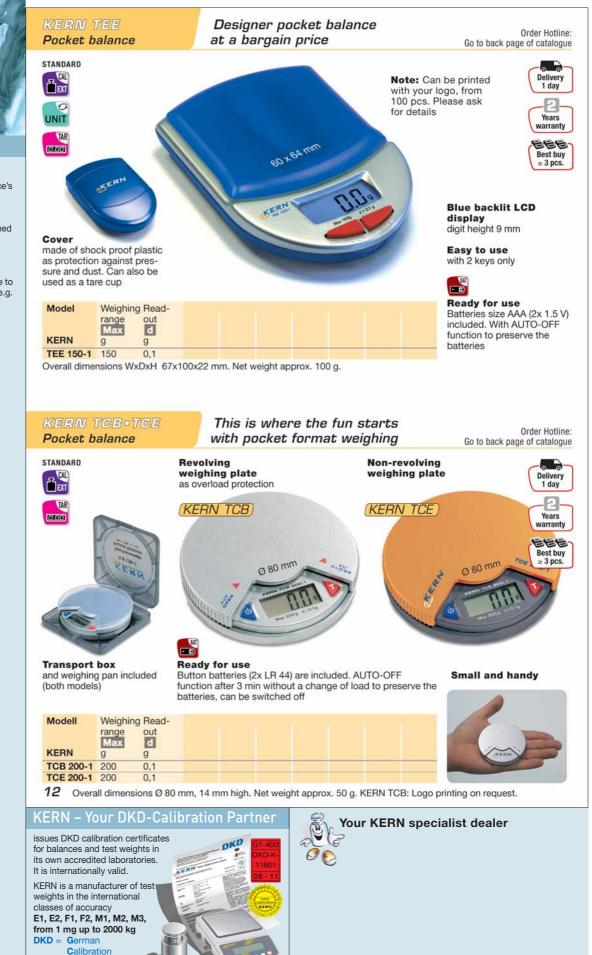

Service