soft starter-ATS22-control 220V-power 230V(18.5kW)/400...440V(37kW)



Main Range of product Altistart 22 Product or component Soft starter type Product destination Asynchronous motors Product specific Severe and standard applications application Component name ATS22 Network number of 3 phases phases Power supply voltage 230...440 V (- 15...10 %) Motor power kW 37 kW at 400 V 37 kW at 440 V 18.5 kW at 230 V Factory setting current 69 A Power dissipation in W 63 W for standard applications Utilisation category AC-53A Type of start Start with torque control (current limited to 3.5 ln) Icl nominal current 75 A (connection in the motor supply line) for standard applications IP20

Complementary

Complementary		
Assembly style	With heat sink	
Function available	Internal bypass	
Power supply voltage limits	195484 V	
Power supply frequency	5060 Hz (- 1010 %)	
Network frequency	4566 Hz	
Device connection	In the motor supply line To the motor delta terminals	
Control circuit voltage	220230 V -1510 % at 50/60 Hz	
Control circuit consumption	20 W	
Discrete output number	2	
Discrete output type	(R1)Relay outputs 230 V running, alarm, trip, stopped, not stopped, starting, ready, C/O (R2)Relay outputs 230 V running, alarm, trip, stopped, not stopped, starting, ready, C/O	
Minimum switching current	Relay outputs 100 mA at 12 V, DC	
Maximum switching current	Relay outputs 5 A at 250 V, AC resistive load, cos phi = 1 Relay outputs 5 A at 30 V, DC resistive load, cos phi = 1 Relay outputs 2 A at 250 V, AC inductive load, cos phi = 0.4, L/R = 20 ms Relay outputs 2 A at 30 V, DC inductive load, L/R = 7 ms	
Discrete input number	3	
Discrete input type	(LI1, LI2, LI3)logic 5 mA 4.3 kOhm	
Discrete input voltage	24 V (<= 30 V)	
Discrete input logic	(LI1, LI2, LI3)positive logic state 0 < 5 V and < 2 mA state 1 > 11 V and > 5 mA	
Output current	0.41 Icl adjustable	
PTC probe input	750 Ohm	
Communication port protocol	Modbus	
Connector type	1 RJ45	
Communication data link	Serial	
Physical interface	RS485 multidrop	

IP degree of protection

Transmission rate	4800, 9600 or 19200 bps	
Max nodes number	31	
Protection type	Phase failure on line Thermal protection on motor Thermal protection on starter	
Marking	CE	
Type of cooling	Forced convection	
Operating position	Vertical +/- 10 degree	
Product weight	12 kg	


Environment

Electromagnetic compatibility	Conducted and radiated emissions conforming to IEC 60947-4-2 level A Damped oscillating waves conforming to IEC 61000-4-12 level 3		
	Electrostatic discharge conforming to IEC 61000-4-2 level 3		
	Immunity to electrical transients conforming to IEC 61000-4-4 level 4		
	Immunity to radiated radio-electrical interference conforming to IEC 61000-4-3		
	level 3		
	Voltage/Current impulse conforming to IEC 61000-4-5 level 3		
Standards	EN/IEC 60947-4-2		
Product certifications	CCC		
	CSA		
	C-Tick		
	GOST		
	UL		
Vibration resistance	1 gn (f = 13200 Hz) conforming to EN/IEC 60068-2-6		
	1.5 mm (f = 213 Hz) conforming to EN/IEC 60068-2-6		
Shock resistance	15 gn for 11 ms conforming to EN/IEC 60068-2-27		
Noise level	45 dB		
Pollution degree	Level 2 conforming to IEC 60664-1		
Relative humidity	<= 95 % without condensation or dripping water conforming to EN/IEC 60068-2-3		
Ambient air temperature for operation	-1040 °C without derating		
	> 40< 60 °C with current derating 2.2 % per °C		
Ambient air temperature for storage	-2570 °C		
Operating altitude	<= 1000 m without derating		
	> 1000< 2000 m with current derating of 2.2 % per additional 100 m		
RoHS EUR status	Compliant		
RoHS EUR conformity date	0938		



Frame Size B

Dimensions

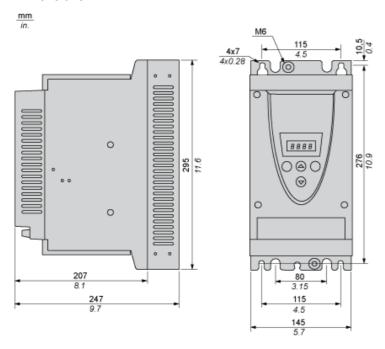

Precautions

Standards

The Altistart 22 soft starter is compliant with pollution Degree 2 as defined in NEMA ICS1-1 or IEC 60664-1.

For environment pollution degree 3, install the Altistart 22 soft starter inside a cabinet type 12 or IP54.

▲ DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

ATS22 soft starters are open devices and must be mounted in a suitable enclosure.

Failure to follow these instructions will result in death or serious injury.

Air Circulation

Leave sufficient free space to help the air required for cooling purposes to circulate from the bottom to the top of the unit.

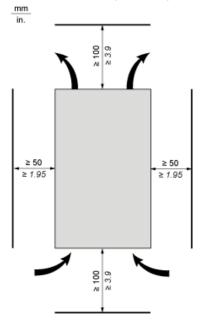


Overheating

To avoid the soft starter to overheat, respect the following recommendations:

- Mount the Altistart 22 Soft Starter within ± 10° of vertical.
- Do not locate the Altistart 22 Soft Starter near heat radiating elements.
- Electrical current through the Altistart 22 Soft Starter will result in heat losses that must be dissipated into the ambient air immediately surrounding the soft starter. To help prevent a thermal fault, provide sufficient enclosure cooling and/or ventilation to limit the ambient temperature around the soft starter.
- If several soft starters are installed in a control panel, arrange them in a row. Do not stack soft starters. Heat generated from the bottom soft starter can adversely affect the ambient temperature around the top soft starter.

Mounting

Connection Between the Fan and the Altistart 22 Soft Starter

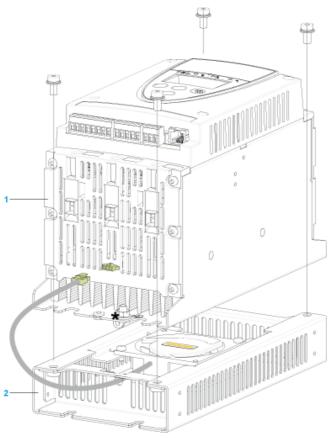

- 1 Altistart 22 Soft Starter
- 2 Fan

Wall mounted or Floor-standing Enclosure with IP 23 Degree of protection


Introduction

To help proper air circulation in the soft starter, grilles and forced ventilation can be installed.

Ventilation Grilles





Forced Ventilation Unit

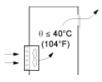

Power Terminal

Cage Style

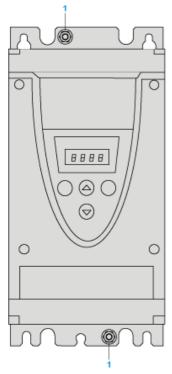

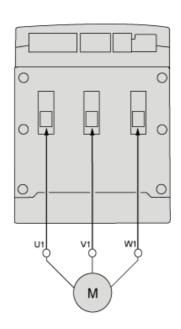

1 Ground connection

Power connections, minimum and maximum wiring capabilities, tightening torque


	IEC cable	UL cable		
Power supply and output to motor	Size/gauge	min	4 mm (a)	10 AWG (a)
max	50 mm	1/0 AWG		
Tightening torque	min	8 N.m	70 lb.in	
max	8 N.m	70 lb.in		•
Strip length		15 mm	0.6 in.	

Power connections, minimum required wiring section


IEC cable	UL cable
mm² (Cu 70°C/158°F) (1)	AWG (Cu 75°C/167°F) (1)
25	3

230 Vac control, logic Inputs (LI) 24 Vdc, 3-wire control

With Line Contactor, Freewheel or Controlled Stop

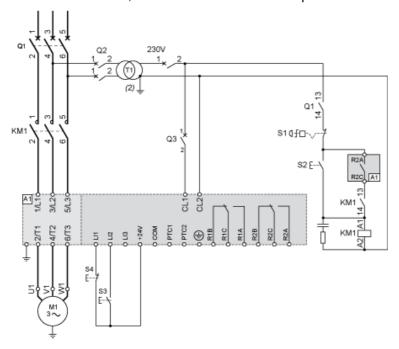

230 Vac control, logic Inputs (LI) 24 Vdc, 2-wire control, freewheel stop

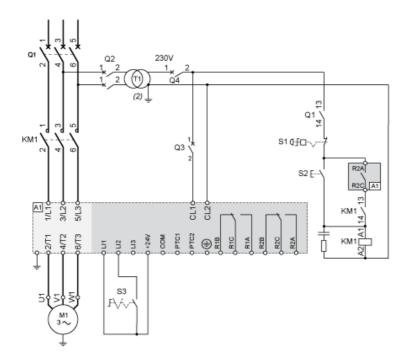


Connection in the motor delta winding in series with each winding

Wiring

ATS22 soft starters connected to motors with the delta connections can be inserted in series in the motor windings.

The following wiring requieres particular attention. It is documented in the Altistart 22 Soft start - soft stop unit user manual. Please contact Schneider Electric commercial organisation for further informations.

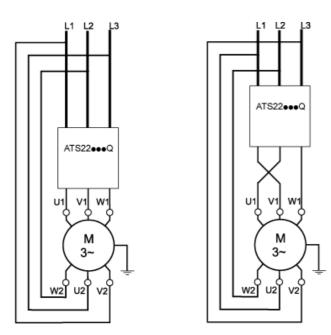


Example

A 400 V - 110 kW motor with a line current of 195 A (nominal current for the delta connection). The current in each winding is equal to 195/1.5 or 130 A. The rating is determined by selecting the soft starter with a permanent nominal current (ICL) just above this current.

Motor Thermal Protection - Cold Curves

Curves

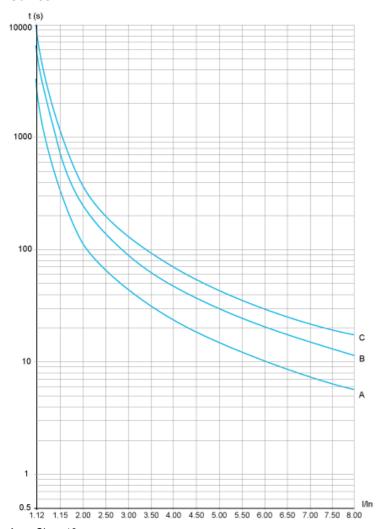

A Class 10

B Class 20 C Class 30

Trip time for a Standard Application (Class 10)

3.5 ln

32 s

Trip time for a Severe Application (Class 20)

3.5 ln


63 s

Trip time for a Severe Application (Class 30)

3.5 ln

95 s

Curves

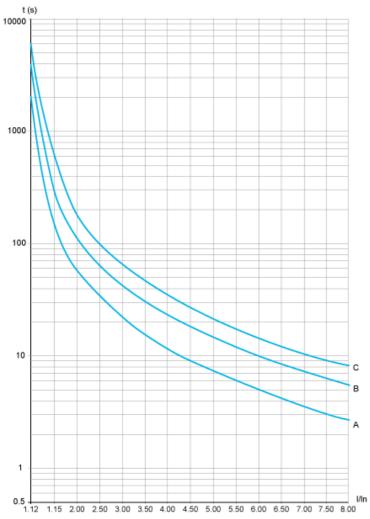

Class 10 Class 20 A B C

Class 30

Trip time for a Standard Application (Class 10)

3.5 ln 16 s

Trip time for a Severe Application (Class 20)

3.5 ln

32 s

Trip time for a Severe Application (Class 30)

3.5 ln

48 s