


Hand Crimp Tool Specification Sheet Order No. 63811-2600

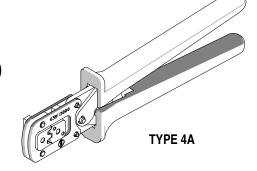

FEATURES

- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomically designed soft handles
- Precisely designed crimping profiles with simple contact positioning
- Easy handling due to outstanding force ratio

SCOPE

<u>Products</u>: 1.50mm (.591") Pitch, MX150™ Blade Male Crimp Terminals, 18-22 AWG.


Terminal Series No.	Terminal	Wire Size		Insulation Diameter		Strip Length		
Terminal Series No.	•R	AWG	mm ²	mm	ln.	mm	ln.	
33000	33000-0002	33000-1002	18	0.83	1.91-2.06	.075081	4.70-5.60	.185220
			20	0.58	1.70-1.85	.067073	4.70-5.60	.185220
	33000-0003	33000-1003	22	0.36	1.50-1.65	.059065	4.70-5.60	.185220
33011	33011-0002	33011-1002	18	0.83	1.91-2.06	.075081	4.70-5.60	.185220
			20	0.58	1.70-1.85	.067073	4.70-5.60	.185220
	33011-0003	33011-1003	22	0.36	1.50-1.65	.059065	4.70-5.60	.185220
31296	31296-0004	31296-1004	18	0.83	1.91-2.06	.075081	4.70-5.60	.185220
	31296-0008	31296-1008	20	0.58	1.70-1.85	.067073	4.70-5.60	.185220
	31296-0006		22	0.36	1.50-1.65	.059065	4.70-5.60	.185220

• Customer to cut off terminal from reel: 0.50mm (.020") maximum Cut-off Tab. Terminals were validated per USCAR-21 using the following wire specifications: M1L-123A (TXL), M1L-135A1 (UTX), and M1L-126A1 (metric-TXL).

Customers are required to complete validation testing if tooling purchased outside Molex Inc. and/or wire specifications are different than above.

UNCONTROLLED COPY Doc No: ATS-638112600 Release Date: 01-21-03 Page 1 of 5 Revision Date: 04-23-08

Revision: D

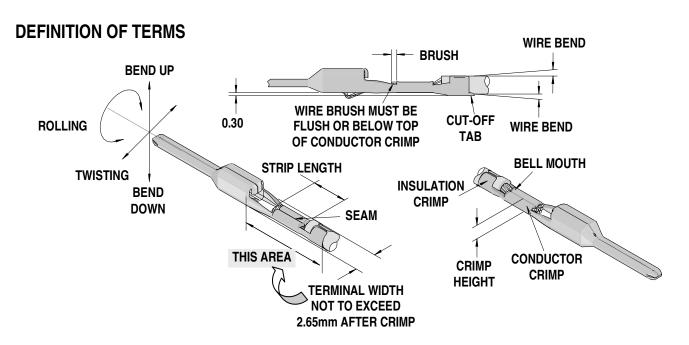

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

CONDITIONS:

After crimping, the crimp profiles should measure the following (see notes on page 4).

Terminal	Bell n	nouth	*Conduc	tor Brush	Bend up	Bend Down	Twist	Roll
Series No.	mm	ln.	mm	ln.	Degree		Degree	
33000	0.25-1.25	.010049	0.15-0.65	.006026	3	3	3	5
33011	0.25-1.25	.010049	0.15-0.65	.006026	3	3	3	5
31296	0.25-1.25	.010049	0.15-0.65	.006026	3	3	3	5
★ Wire brush must be flush or below top of Conductor Crimp.								

Terminal Series No.	Wire Size		Conductor Crimp				Profile		е
			Height		Width		AWG		
	AWG	mm²	mm	ln.	mm	ln.	22	18	20
33000	18	0.83	1.20-1.30	.047051	2.05-2.25	.081089		Х	
	20	0.58	1.10-1.20	.043047	2.05-2.25	.081089			Χ
	22	0.36	0.95-1.05	.037041	1.50-1.70	.059067	Χ		
	18	0.83	1.20-1.30	.047051	2.05-2.25	.081089		Χ	
33011	20	0.58	1.10-1.20	.043047	2.05-2.25	.081089			Χ
	22	0.36	0.95-1.05	.037041	1.50-1.70	.059067	Χ		
31296	18	0.83	1.20-1.30	.047051	2.05-2.25	.081089		Χ	
	20	0.58	1.10-1.20	.043047	2.05-2.25	.081089			Χ
	22	0.36	0.95-1.05	.037041	1.50-1.70	.059067	Χ		

Doc No: ATS-638112600 Release Date: 01-21-03 Revision: D Revision Date: 04-23-08

	Wire Size		Insulation Crimp					Pull Force	
Terminal Series No.			Height		Width		Minimum		
	AWG	mm²	mm	ln.	mm	ln.	N	Lb.	
33000	18	0.83	1.90-2.10	.075083	2.20-2.40	.087094	90.0	20.25	
	20	0.58	1.80-2.00	.071079	2.00-2.20	.079087	75.0	17.00	
	22	0.36	1.75-1.95	.069077	1.80-2.00	.071079	50.0	11.25	
33011	18	0.83	1.90-2.10	.075083	2.20-2.40	.087094	90.0	20.25	
	20	0.58	1.80-2.00	.071079	2.00-2.20	.079087	75.0	17.00	
	22	0.36	1.75-1.95	.069077	1.80-2.00	.071079	50.0	11.25	
31296	18	0.83	1.90-2.10	.075083	2.20-2.40	.087094	90.0	20.25	
	20	0.58	1.80-2.00	.071079	2.00-2.20	.079087	75.0	17.00	
	22	0.36	1.75-1.95	.069077	1.80-2.00	.071079	50.0	11.25	

OPERATION

Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

Crimping Terminals

- 1. Lift the wire stop blades up.
- 2. Insert the terminal fully into the correct die profile and the locator slot until the terminal is fully seated and stops.
- 3. Bring down the wire stop blades. Make sure the wire stop blades are fully seated on the terminal behind the conductor grip section.
- 4. Slide the pre-stripped wire into the terminal; make sure to aim the wire brush towards the tip point on the wire stop blade. See Figure 1. Align the wire so that it is parallel and sitting into the terminal. Maintain a light and constant pressure on the wire that is seated in the terminal at all times. (Do not let go of the wire.) Be sure to hold the wire and terminal in place until the terminal is fully crimped. See Figure 2.
- 5. Close the tool until the ratchet releases.
- 6. Lift the wire stop blades up.
- 7. Carefully remove the crimped terminal.

Note: To maintain a good brush control and a consistent bell mouth the crimping instructions must be followed.


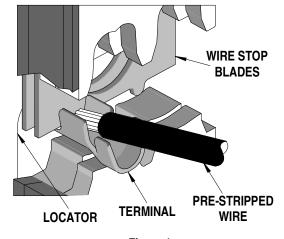


Figure 1

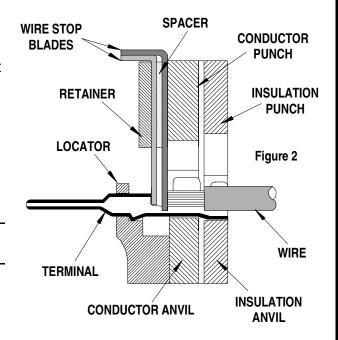

Doc No: ATS-638112600 Release Date: 01-21-03 Revision: D Revision Date: 04-23-08

UNCONTROLLED COPY

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the tool.
- 3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively.
- 4. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.

Miscrimps or Jams (See Figure 3)

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by pushing the ratchet release lever.

Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals and tooling.

Notes:

- 1. This tool should only be used for the terminals and wire gauges specified on this sheet.
- 2. This tool is not adjustable for crimp height, however crimp force is adjustable (See instructions above). Variations in tools, terminals, wire stranding and insulation types may affect crimp height.
- 3. This tool is intended for standard conductor sizes. It may not give a good insulation crimp support for all insulation sizes.
- 4. Molex does not repair hand tools (see warranty above). The replacement parts listed are the only parts available for repair. If the handles or crimp tooling is damaged or worn, a new tool must be purchased.
- 5. Pull force should be used as the final criteria for an acceptable crimp. Pull force is measured with no influence from the insulation crimp. The insulation should be stripped long (1/2 in.), so the insulation grips on the terminal do not grip the wire insulation or the conductor. Refer to Molex Quality Crimping Handbook 63800-0029 for additional information on crimping and crimp testing.
- 6. Molex does not certify crimp hand tools.
- 7. Hand held crimping tools are intended for low volume, prototyping, or repair requirements only.

CAUTION: Repetitive use of this tool should be avoided.

UNCONTROLLED COPY Doc No: ATS-638112600 Release Date: 01-21-03 Page 4 of 5

Revision: D Revision Date: 04-23-08

PARTS LIST

Item Number	Order Number	Description	Quantity
1	63600-0520	Crimping Spring	2
2	63811-2675	Locator	1
3	63600-0525	Handle Spring	1

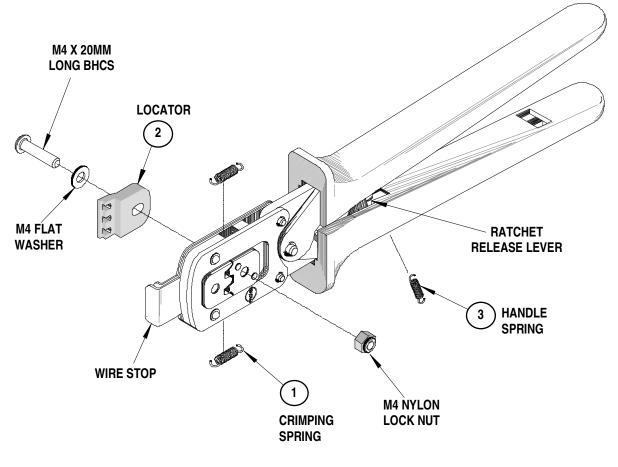


Figure 3

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com

Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-638112600 Revision: D Release Date: 01-21-03 Revision Date: 04-23-08